



## Ctek Z4200 Series SkyRouter Getting Started

October 11, 2009

### Introduction:

Ctek wants to thank you for selecting this Z4200 Series product. We realize that for many of you this will be your first exposure to Ctek's product line. Our goal with this document is exactly as the title suggests, helping you get started. As a first read we believe that the information found here will serve as a useful quick start and as a pointer to some of the more in depth documentation found in the product's User Manual which is available at [www.ctekproducts.com](http://www.ctekproducts.com).

### Connections:

The green connector J1 supports four separate functions, power, relay contact closure detection, relay driver output, and auxiliary serial port serial data. Contact closure pins 2 and 4 are shared with the auxiliary serial port. To option remove the circuit board and locate 3-pin headers JP1 & JP2 behind the green connector. Facing the end of the board containing the green connector JP1 and JP2 should have jumpers center to right to use the discrete I/O (Din, Dout), and JP1 and JP2 should have jumpers center to left to use the auxiliary serial port. Auxiliary serial port parameters (baud, parity, etc.) are set using the RS232 screen. From the factory the unit ships with the auxiliary serial port enabled.

The J1 pin out configuration is as follows:

Terminal Block Pin	JP1 & JP2 (internal) Center to Right	JP1 & JP2 (internal) Center to Left
Pin 1	Din – Discrete Input (See Appendix A)	
Pin 2	Din Src – Discrete Input Source	RxD of auxiliary serial port
Pin 3	Dout Gnd – Discrete Output Ground	Ground of auxiliary serial port
Pin 4	Dout – Discrete Output	TxD of auxiliary serial port
Pin 5	Power supply Ground	Power supply Ground
Pin 6	Power supply +12VDC	Power supply +12VDC

### Z4200S Connections

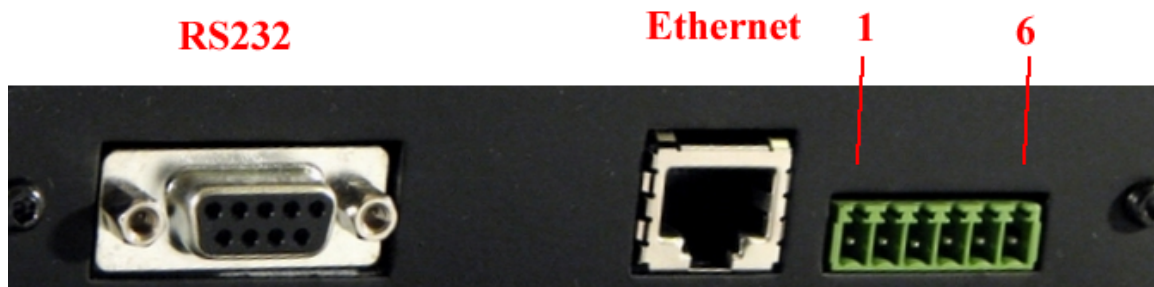


Figure 1



## Ctek Z4200 Series SkyRouter Getting Started

October 11, 2009

### Z4200U Connections

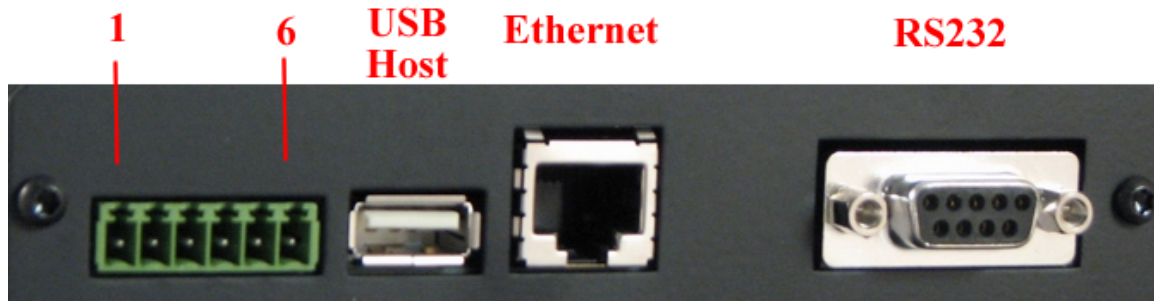


Figure 2

### Switches and Indicators:

#### Switches

Referring to Figure 2, there are two switches on the front of the Z Series router. S1 (Reset) causes a hard reset of unit. S2 (DFLT) is used to completely restore the firmware settings that were included when the product was shipped from the factory. To restore factory defaults, the unit must be running. Press the Restore Defaults (inner) switch and hold it down for 10 seconds. After 10 seconds, you will see both the green and yellow lights go off. At that time you may either press the reset (outer) switch or cycle power on the unit.

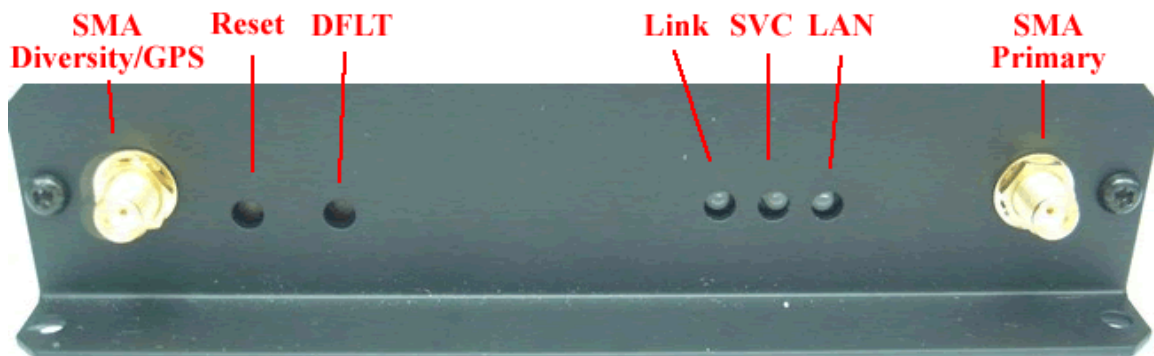


Figure 3



## Ctek Z4200 Series SkyRouter Getting Started

October 11, 2009

### Indicators

LAN – The LAN light indicates that the Ethernet port is connected to an active Ethernet device.

The network status indicators LINK and SVC are interpreted as follows:

**SVC** – Multi-color (yellow/green). Indicates:

- a) Power
- b) RSSI

Display	Definition
Off	No Power
Yellow Blinking	Power On – No Signal (RSSI)
Yellow Solid	Power On – RSSI < -88
Green Solid	Power On – RSSI >= -88

**Link** - Multi-color (red/green). Indicates:

- a) Status of IP connection
- b) Type of transport (EV-DO or 1xRTT)

Display	Definition
Off	No Connection (IP address)
Green	Connection established on 1xRTT
Red	Connection established on EV-DO

### Connecting To the SkyRouter

Connect a laptop to the SkyRouter's Ethernet port using a standard Ethernet cable. The factory default for the SkyRouter is to act as a DHCP server meaning that your laptop should be set up as a DHCP client. Most laptops used on corporate or home networks will already be configured as a DHCP client.

To access the Administration menu use a conventional web browser pointed at <http://192.168.1.10>. A login screen appears as shown below. The default User ID is "ctek" (without the quotes) and the default Password is also "ctek". Be sure to change the user ID and password and record your new selections.



## Ctek Z4200 Series SkyRouter Getting Started October 11, 2009

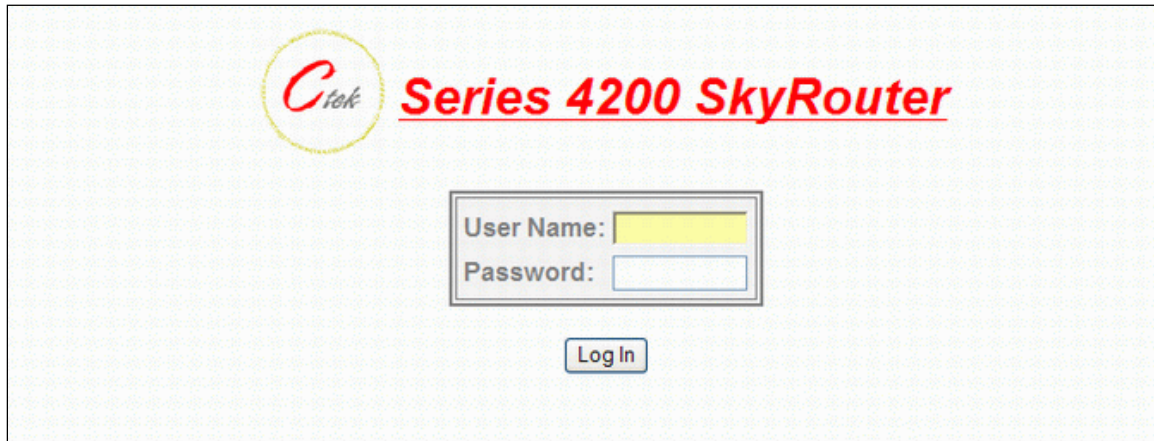


Figure 4

### Network Activation

The Wireless Activation Services interface serves two purposes. First, it provides a mechanism to activate the router on the wireless networks utilizing a form of Over The Air (OTA) activation. Secondly it may be used as a general interface to send specific commands, known as AT commands, to the router's radio module.

#### Over The Air Activation Overview

For Verizon and Sprint networks activation is as simple as pushing a button. The prerequisites are that a network account be assigned to your units ESN and that the unit is located in an environment where the SkyRouter can verify network stability. The network stability criteria is that during the previous two minute sample period the RSSI is less than (smaller negative number) - 99dBm, the SID has not changed, and the unit has access to 1xRTT connectivity. Once the prerequisites are met the activation button is clicked and the progress may be observed in a status window.

**Over The Air Network Process** – If the wireless module in your Z Series router is capable of performing an OTA activation you will be presented with the option to select the appropriate activation method. Currently this capability is limited to the OMA-DM method for Sprint-Nextel or the OTAS method for Verizon Wireless. The Verizon Wireless OTAS also updates the unit's PRL and can be redone whenever a new PRL is required. Sprint OMA-DM is capable of downloading a PRL over the air but the feature is not yet implemented in the network. Because of the differences in PRL strategies the Verizon Activation Services screen is different than the Sprint version.



## Ctek Z4200 Series SkyRouter Getting Started October 11, 2009



### Wireless Activation Services

Local PRL Update	Select
Over The Air PRL Update	Select
Over The Air Activation	Select
Manual Configuration	Select

Home

Figure 5



### Wireless Activation Services

Over The Air Activation	Select
Manual Configuration	Select

Home

Figure 6 (Verizon Wireless)



## Ctek Z4200 Series SkyRouter Getting Started October 11, 2009

Selecting the Over The Air Activation option on either of these screens will cause the actual activation screen (Figure 26) to be displayed.



Figure 7

**Activation Status** – Activated or Not Activated

**Network Stability** – Indicates OK For Activation if during the previous two minute sample period the RSSI is less than (smaller negative number) -99dBm, the SID has not changed, and the unit has access to 1xRTT connectivity. IOTA and OTAS activations do not currently work for conditions where the connection is EV-DO only.

**Activate** – Causes the unit to contact the network for an over-the-air activation

**Status** – Refreshes the current screen so that progress can be monitored.

**Details** – Displays a scrolling screen (Figure 27) with low level messages between the unit and the network. Useful when an activation problem is encountered.

**Back** – Return to the Activation Services screen.

Detailed information on IOTA or OTAS activations are covered in the TechNote appropriate for your network. The Status and Details buttons can be used to monitor the activations progress.



## Ctek Z4200 Series SkyRouter Getting Started October 11, 2009

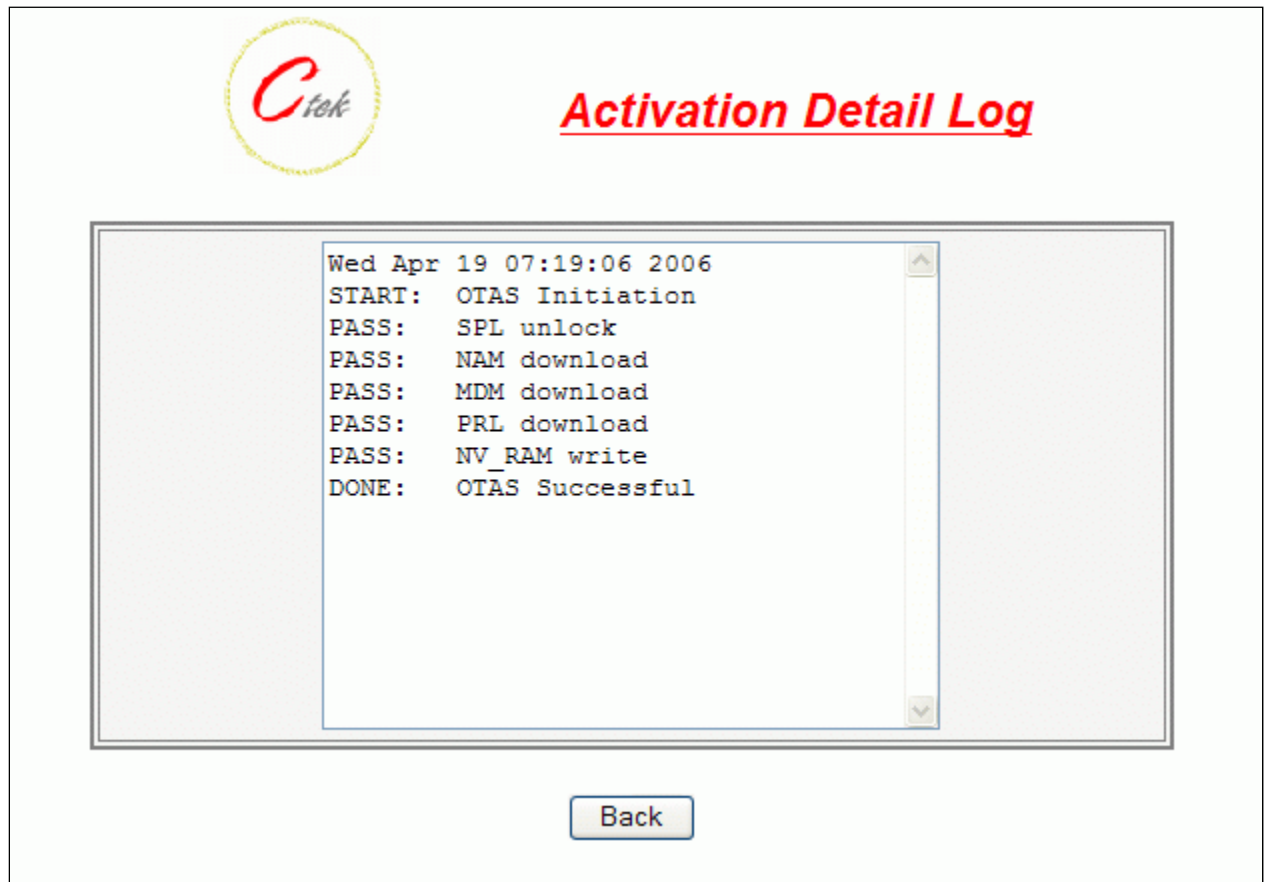


Figure 8

For configuration information on the many features found in the Z4200 see the user manual, TechNotes, Application Notes, and Technical Information Bulletins available at [www.ctekproducts.com](http://www.ctekproducts.com).